



# RÔTISSOIRE

## User maintenance guide



**1** Before carrying out any maintenance check that the appliance is not hot



**2** After each use, clean the drip tray and spits and clean off any splashes of fat on the rôtissoire.



**3** Enamelled panels: Use luke-warm soapy water, and rinse and wipe carefully.



**4** Clean and polish brass parts selecting the proper detergent specifically design for that material and application.



**5** Remove dirt and incrustations with a plastic bristles brusher or with a Scotch-Brite sponge. Wipe with a cloth and lubricate with a thin layer of cooking oil.



**6** Once a month, clean and oil the rotation mechanism with special grease (lubricant for high temperature and NSF H1 certified).



### Cleaning external surfaces

Wash the external surfaces with warm, soapy water. Avoid using detergents containing abrasive substances, steel wool, brushes or steel scrapers. Rinse with a damp cloth and dry carefully. Avoid using chlorine or ammonia-based products. Clean the control panel with a soft cloth dampened with water and, if necessary with neutral detergent. Do not wash the equipment with direct or high pressure jets of water. With the aim of reducing the emission of polluting substances into the atmosphere, it is advisable to clean the equipment (externally and, when necessary, internally) with products that have a biodegradability exceeding 90%. **Electrolux Professional strongly recommends to use Electrolux Professional approved cleaning agents, rinse and descaling agents to obtain better results and maintain product efficiency over time.** Damages caused by cleaning, as a consequence of use of not approved cleaning agents, rinse and descaling, will be excluded by the warranty.

The operations described must be performed wearing the needed Personal Protection Equipment. Refer to the User Manual.

### Planned Maintenance Programmes

In order to ensure the safety and performance of your equipment, it is recommended that regular service is undertaken every 12 months by Electrolux Professional authorised engineers in accordance with the manufacturer recommendations. Please contact your local Electrolux Professional Service Centre for further details of service agreements available.

### Suggested for you

For more Accessories & Consumables please look at our Catalogues or contact our Electrolux Professional Service Partner.



**Skewer for fish**  
425 Rôtissoire **RO2920**  
Type A **RO2082**  
Type B **RO2071**



**Clamp skewer**  
425 Rôtissoire **RO1593**  
Type A **RO1592**  
Type B **RO1591**



**Star skewer**  
Type A/B **RO2179**  
Type A/B (with Star slide) **RO2180**



**Turn-style with 4 skewers**  
425 Rôtissoire  
Type A/B **RO1343**



**Square skewer**  
425 Rôtissoire  
Type A/B **RO1345**



**Skewer for sausages**  
425 Rôtissoire  
Type A/B **RO1342**



**Skewer for lobsters (baskets)**  
425 Rôtissoire  
Type A/B **RO1346**



**Skewer for turbot**  
425 Rôtissoire  
Type A/B **RO1341**



**Skewer for eggs**  
425 Rôtissoire  
Type A/B **RO1310**



**Ceramic rope diameter 8 mm. Sold by meter**  
**0M1927**

## GAS FUNCTIONS

Anomaly	Possible cause	Instructions to User
<b>Pilot burner will not ignite</b>	<ul style="list-style-type: none"> <li>- Gas tap is turned off</li> <li>- Insufficient gas supply</li> <li>- Pilot burner worn</li> <li>- Gas ignition electrode not fastened properly or connected badly</li> </ul>	<p>Check whether main gas supply tap is turned on. If the problem persists, call service</p>
<b>Pilot burner goes out when knob is released</b>	<ul style="list-style-type: none"> <li>- Main burner worn</li> <li>- Insufficient gas pressure</li> <li>- Faulty gas tap or valve</li> </ul>	<p>Call service</p>
<b>No flame at one or more ceramic fiber wicks</b>	<ul style="list-style-type: none"> <li>- Fiber is worn</li> <li>- Issue with the main burner</li> </ul>	<ul style="list-style-type: none"> <li>- In case the main burner is working it is possible cooking: call service to refurbish the worn fiber.</li> <li>- In case the main burner is not working call service.</li> </ul>

## ELECTRIC FUNCTIONS

Anomaly	Possible cause	Instructions to User
<b>Appliance does not turn on</b>	<ul style="list-style-type: none"> <li>- No power supply</li> <li>- Faulty electrical system</li> </ul>	<p>Check whether main power supply is turned on. If the problem persists, call service</p>
<b>Skewer does not rotate</b>	<ul style="list-style-type: none"> <li>- Skewer chain or gear disengaged from drive system</li> <li>- Drive system stuck</li> <li>- Drive system no power or failure</li> </ul>	<p>Switch the power off, ensure the chains and the gears are well coupled, remove anything might obstacle the rotation. If the problem persists, call service</p>

